



JTC-1002
ALIGNMENT TOOLS



JTC-1014
AXLE NUT SOCKET



JTC-1016
INNER CV JOINT PULLER



JTC-1020
HAND OPERATED FLUID EXTRACTOR (10L)



JTC-1023A
PNEUMATIC FLUID EXTRACTOR



JTC-1024
PNEUMATIC OIL & LIQUID DISPENSER



JTC-1025
PNEUMATIC BRAKE BLEEDER



JTC-1026
BRAKE OIL FILLER



JTC-1030
UNIVERSAL BEARING PACKER



JTC-1031
WASTE OIL DRAIN



JTC-1032
VACUUM OIL EXTRACTING MACHINE & BRAKE BLEEDER



JTC-1033
HAND OPERATED OIL PUMP



JTC-1034
AIR OPERATED GREASE PUMP



JTC-1035
HYDRAULIC GEAR PULLER SET



JTC-1036
OUTER TIE ROD REMOVER



JTC-1045
HAND OPERATED FLUID EXTRACTOR (6.5L)



JTC-1050
PNEUMATIC & HAND OPERATED FLUID EXTRACTOR



JTC-1129
PITMAN ARM PULLER



JTC-1141
TWO SETS BEARING SEPARATOR KIT



JTC-1142A
BEARING SEPARATOR KIT



JTC-1142P

EXTRA LONG EXTENTION BAR FOR JTC-1142



JTC-1143
HYDRAULIC BEARING SEPARATOR PULLER KIT



JTC-1144
BEARING SEPARATOR PULLER KIT



JTC-1145
UNIVERSAL AXLES SLIDE HAMMER SET



JTC-1146
3-JAW INTERNAL & EXTERNAL PULLER SET



JTC-1210
AXLE NUT SOCKET



JTC-1212
CLIC-R COLLAR PLIERS



JTC-1217
CV BOOT CLAMP TOOL



JTC-1230
ANGLE LOCATOR



JTC-1241
FENDER EXTENDING TOOL



JTC-1246
COMPRESSOR FIXED BASE



JTC-1247
BALL JOINT SEPARATOR



JTC-1257
BALL JOINT SEPARATOR



JTC-1258
BALL JOINT SEPARATOR



JTC-1259
UNIVERSAL HUB PULLER



JTC-1316
BALL JOINT EXTRACTORS